ENGINEERED and MANUFACTURED

FOR ECONOMY RELIABILITY PERFORMANCE

LICTION SHE

IMPORTANT

REFER TO YOUR OWNER'S MANUAL OFTEN

> EXISTING RETENTION CLIPS

WHEEL

WRENCH



VHEEL TRIM RING AGAINST T VALVE STEM PROTRUDES

TIRE

HEEL TRIM RING FIRMLY L RIM FLANGE SO RETEN-

TION CLIPS ARE IN CORRECT POSITION ON FLANGE. SEE FIG. 1 & 2.

STRIKE EACH CLIP FIRMLY WITH RUBBER MALLET STARTING AT VALVE

FIG. 2 WHEEL TRIM RING REMOVAL thefts occur because cap doors are quit UNLOCKED or ignition key is NOT REMOVED? WHEEL TRIM RING REMOVAL

ALWAYS REMOVE FIGHT FROM REVEAND FLANGE NEAR TOWN THE PRIVING WHEEL WRENT TO DRY TOWN TWIST WHEEL WRENT TO WELL THE TOWN CLIPS FROM WHEEL RIM FLANGE, REPEAT AT EACH CLIP UNTIL WHEEL TRIM RING IS FREE. SEE FIG. 2.

Wheel removal can be accomplished without removing trim ring.

TRIM

RING

-WHEEL HENNEEDS FLANGE.

PRINTED IN U.S. A.

9-23-66

PART NO. 3913832

PRINTE